


## Blok N Mesh Installation Guide

### On Ground Defender Paladin Fence With Brace Block


#### The components



Corner post



Defender Panel

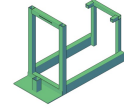

Base unit




Nuts and Bolts



Defender Post




Adjustable bracket

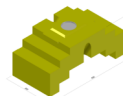


Brace Block



Security clamps

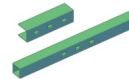


Anti Rip bracket

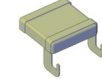

Post Cap c/w Hook


#### The installation process

1

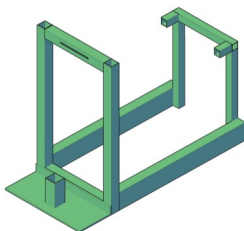


Position the first base at the intended starting point of the fence line.

2

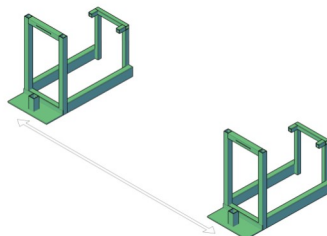


Measure the correct distance for the next base and place in position.

3

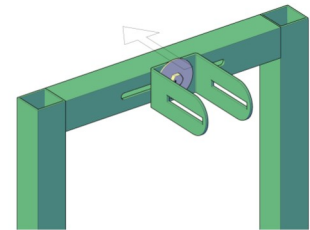


Fit the adjustable bracket as shown to the top of each base unit.

4

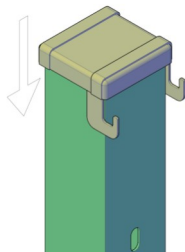


Fit the plastic post cap into the top of the post as shown, ensuring the hooks are on the front face of the post.

5

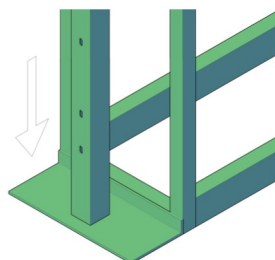

Place post onto base. Ensure the post is plumb before tightening.


6

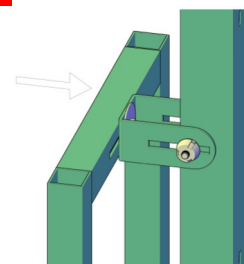

Fit the post in place to the adjustable bracket, then secure nut and bolt through adjustable bracket.

## The installation process – continued

7

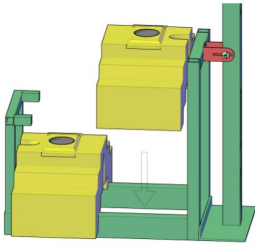


Place the first brace blocks in position on the base unit as show.

10


Repeat steps 7 to 9 for the second post.

13

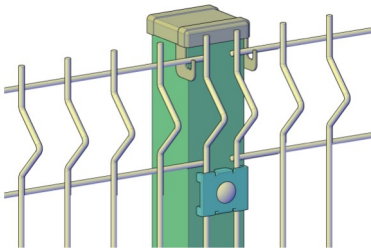


Hang the next panel as described in step 11 and secure along with the first panel. As each panel is fitted, it is secured on one side only along with the remaining unsecured side of the previous

16

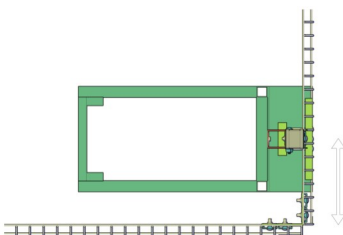


To install a corner, off set the last post as shown and secure in place. Then fit the corner post to the end

8

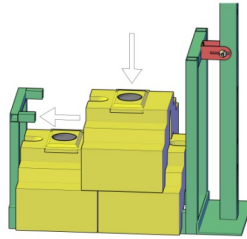


To load the next brace blocks, place the first one on top of the base pair and slide backwards to sit under the retention spigots, as shown.

11

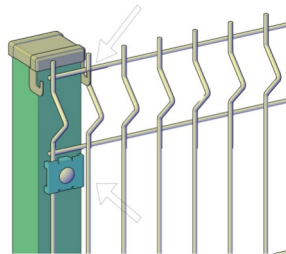


Hang the defender panel between the two posts using the plastic hooks and secure in place, using the security clamps, on the first

14

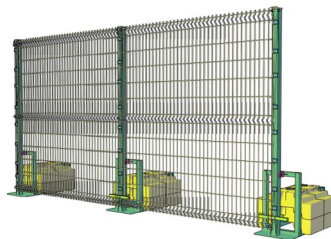


Continue to install in this way until you reach the end of the fence line. At this point, the panel should be secured to both posts.

17

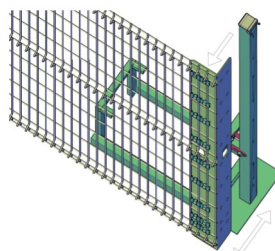


9

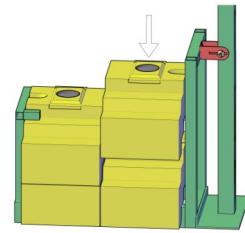


Place the fourth brace block in position as shown, to complete the loading.

12

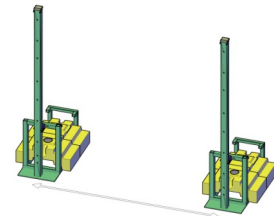

Install the next base, post and ballast as described in steps 2 to 9.

15

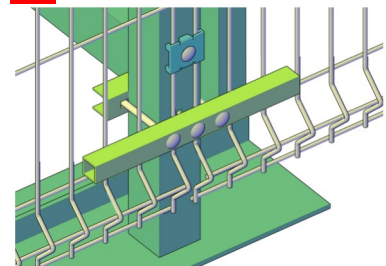

Once the panels are fitted connect the anti rip bracket as shown and secure using M8 nuts and bolts.

Measure the required distance for the next two posts and install as previously described. Then hang the panel as shown and secure in place on the off set post and the corner post. Continue to install as before until your fence line is complete.