


## Blok N Mesh Installation Guide

### On Ground Defender Paladin Fence With Ballast Tank


#### The components




Corner post



Defender Panel



Base unit



Nuts and Bolts



Defender Post



Adjustable bracket



Ballast Shield



Ballast tank



Security clamps




Anti Rip bracket



Post Cap c/w Hook


#### The installation process

1

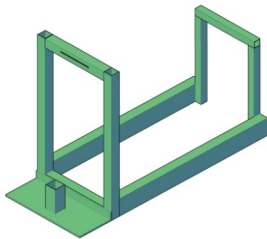


Position the first base at the intended starting point of the fence line.

2

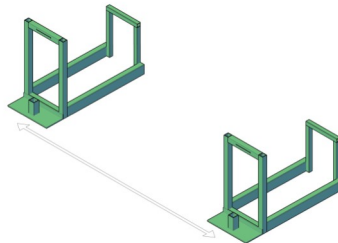


Measure the correct distance for the next base and place in position.

3

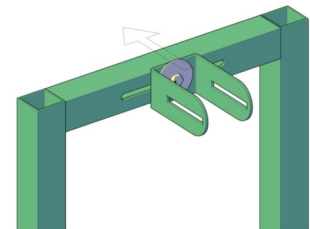


Fit the adjustable bracket as shown to the top of each base unit.

4

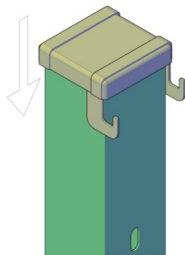


Fit the plastic post cap into the top of the post as shown, ensuring the hooks are on the front face of the post.

5

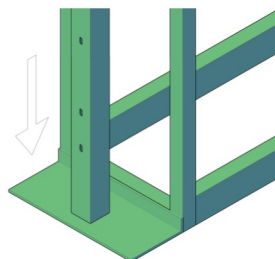

Place post onto base. Ensure the post is plumb before tightening.


6

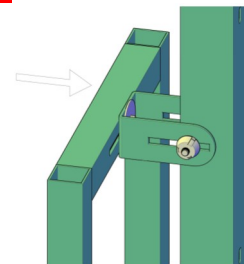

Fit the post in place to adjustable bracket, then secure using nut and bolt through adjustable bracket.


## The installation process – continued

7

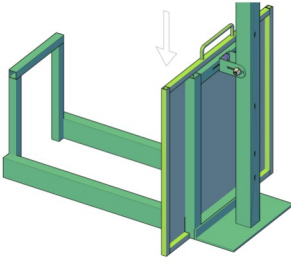

Place the ballast shield in position as shown.

8

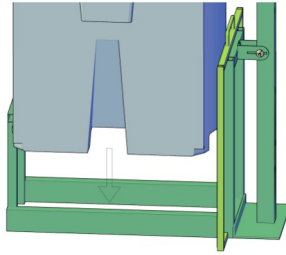


Place the ballast tank in position on the base unit and fill with water.

9


Repeat steps 7 and 8 for the second post.

10

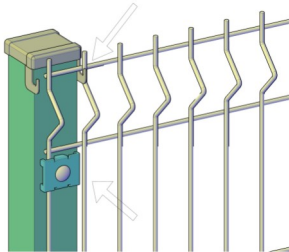


Hang the defender panel between the two posts using the plastic hooks and secure in place, using the security clamps, on the first

11

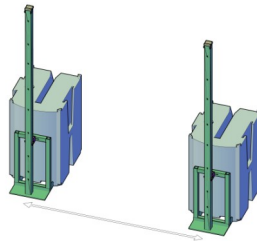


Install the next base, post and ballast as described in steps 2 to 9.

12

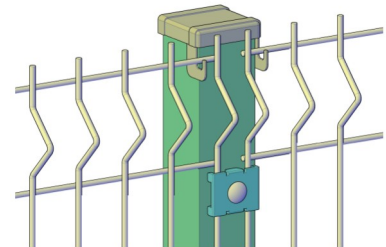


Hang the next panel as described in step 10 and secure along with the first panel. As each panel is fitted, it is secured on one side only along with the remaining unsecured side of the previous panel.

13

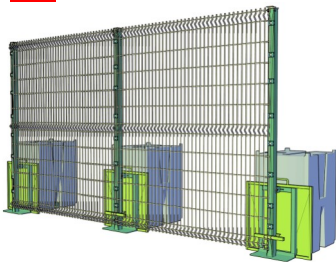


Continue to install in this way until you reach the end of the fence line. At this point, the panel should be secured to both posts.

14

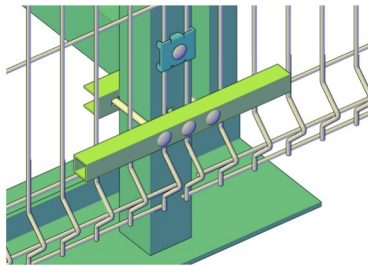


Once the panels are fitted connect the anti rip bracket as shown and secure.

15

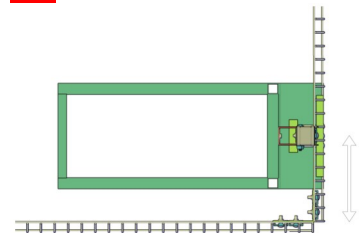

To install a corner, off set the last post as shown and secure in place. Then fit the corner post to the end of the fence panel, as shown.

16

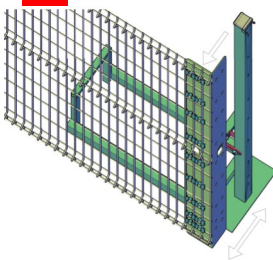

Measure the required distance for the next two posts and install as previously described. Then hang the panel as shown and secure in place on the off set post and the corner post. Continue to install as before until your fence line is complete.